

LOCKING / CHAMFERS


CREATING A CHAMFER



- Twist the locking knob to lock the dog in place.



- With the chamfer fitted the dog will be flush if using a UJK top.

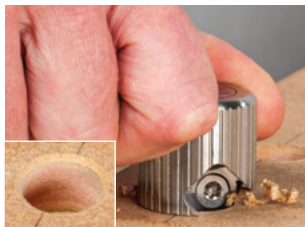

- If you are creating a top with a UJK parf guide system a small chamfer will be needed. Use either the UJK chamfer cutter or router.



- The super dog can also be inserted from beneath the work top to create a low profile dog.

UJK, Axminster Devon EX13 5PH

ujktools.com

Leaflet Ref: 104397



Super Dog



OVERVIEW


CONFIGURATIONS



The parf super dog can be assembled in two configurations.



Stop ring chamfer

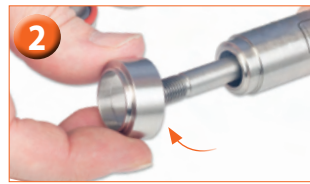

25mm Mid bush register

